PIONEER®
The future of sound and vision.

PD-MV55

Operating Instructions
Mode d'emploi
Bedienungsanleitung
Istruzioni per l'uso
Manual de instrucciones

MULTI-PLAY COMPACT DISC PLAYER
LECTEUR DE COMPACT DISC A CHARGEUR
MULTI-PLAY COMPACT-DISC-SPIELER
LETTORE PER COMPACT DISC A DISCHI MULTIPLI
REPRODUCTOR DE MULTIDISCOS COMPACTOS

COMPACT disc DIGITAL AUDIO

English
Français
Deutsch
Italiano
Español

IMPORTANT

The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION:
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Thank you for buying this PIONEER product.
Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference. In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However, the method of connecting and operating the unit is the same.

This unit is a player for the Compact Disc jukebox CJ-V50.
Please refer to CJ-V50's "Operating Instructions".

"This product complies with the Radio Interference requirements of the EC (European Community) Directive 87/308/EEC."

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

CONTENTS

INSTALLING DISCS TO THE MAGAZINES 3
CARE OF DISCS 4
REMOVING THE TRANSPORT SCREWS 5
NAME AND FUNCTION OF EACH PART 5
CONNECTION 6
SPECIFICATIONS 7

Condensation

In winter, if this system is brought from outdoors into a heated room or the temperature of the room where this system is installed is raised quickly, the operation unit or lens will be covered by condensation.
When covered by condensation, this system cannot read and play laser beam signals.
Keep this system at room temperature for one to two hours depending on the degree of condensation and the condensation will evaporate, making this system ready for playing.
Other symptoms similar to condensation may also occur at places exposed directly to a cooler or air-conditioner in summer. In such a case, move this system to another location.

INSTALLING DISCS TO THE MAGAZINES

Insert any discs which you may have into the magazine. Up to six discs may be inserted. The numbering of the discs begins with 1 at the topmost tray, and then increases in order from 2 to 6 for the lower trays.

① Pull out only one disc tray.

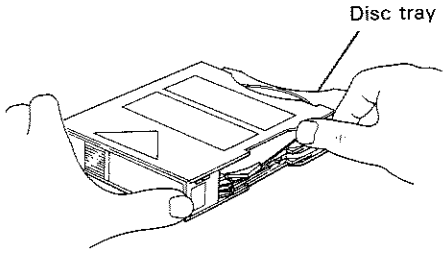

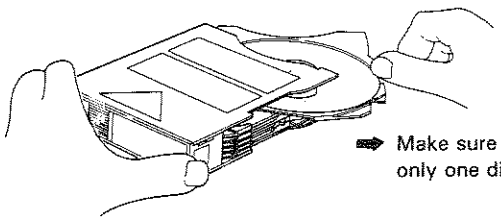

② Position discs with the label side downward.

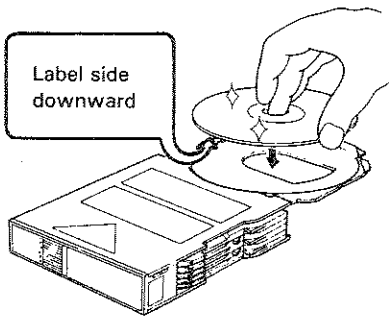

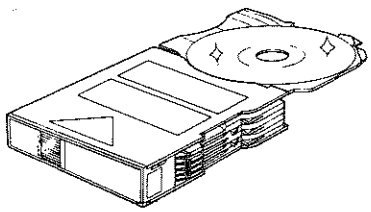

③ Push the disc tray back in.

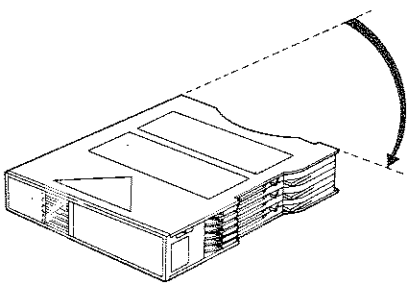

④ Insert other discs by repeating steps ① to ③.

NOTE:

- *Please make sure to only pull out one disc tray at a time. (When a disc tray has been pulled out, do not pull out other disc trays.)*
- *If discs are inserted label side upward, it will not be possible for them to be played. Please make sure to insert them with the label side downward.*
- *Objects other than discs (song cards, explanations of disc contents, etc.), must never be inserted into the disc trays.*
- *Do not touch the playing surface of discs (the iridescent side) with hands or fingers.*

⑤ Insert the magazine into the appropriate magazine insertion slot of the CD player until it clicks.

⑥ Insert the magazines into other magazine insertion slots by repeating step ① to ⑤.

IMPORTANT

Make sure to insert all three magazines into the three magazine insertion slots of the CD player.
Otherwise, the CD player will not operate.
Insert an empty magazine if no discs are required.

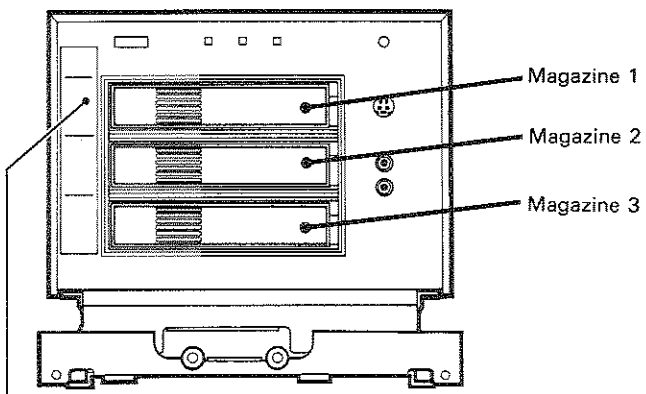

Affix the supplied labels.

- Refer to the first CD player for affixing the labels.
- The labels should be "No.2 PLAYER" for the second CD player, and "No.3 PLAYER" for the third CD player.

CAUTIONS REGARDING HANDLING OF MAGAZINES

- When inserting a magazine into the player, make sure that the direction of insertion is correct.
- After use, store in the case provided. Do not place in locations subjected to high temperatures or exposed to direct sunlight.
- Do not take magazines apart.
- Be careful not to drop or hit magazines against things. Also, do not apply strong force to trays which have been withdrawn.
- Application of benzene, thinner, insecticide or other volatile liquids to a magazine may damage the surface, so keep magazines away from such substances.

CAUTION

This magazine is for use with the CD JUKEBOX and, because of the wear which naturally occurs, should be replaced at 6 monthly intervals.
The 6 monthly interval is a rule of thumb. The real replacement interval depends on the frequency of use and the circumstances. The ball bearing becomes worn after the same tray has been used for play 5,000 – 8,000 times. Using the worn ball bearing increases the load to the mechanism, resulting in damage on the drive motor or other parts. Early replacement is therefore recommended.

When exchanging the magazine, use the separately sold magazine (JD-MV201) only.

CAUTION
To protect the mechanisms, make sure to remove all magazines from the player before transport.

CARE OF DISCS

- With this unit, use discs which display the mark shown below.

- When holding discs, do not touch their signal surfaces. Hold the edges, or one edge and the center hole.

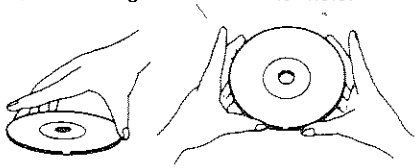

- Do not affix labels or adhesive tape to the label surfaces. Also, do not scratch or damage the label.

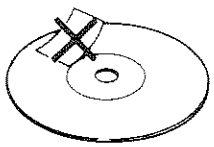

- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.

CLEANING DISCS

- The presence of fingerprints or smudges on the surface of the disc will not directly affect the recorded signals; but depending on the degree of contamination, the brightness of the light reflected from the signal surfaces may be reduced, causing degradation of sound quality.
  Always keep your discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.

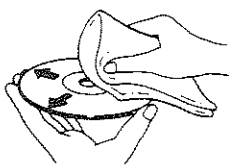

- If a disc becomes very dirty, wet a soft cloth in water. After wringing it out well, wipe the dirt away gently, and then remove any water drops with another soft dry cloth.
- Do not use record cleaning sprays of anti-static agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

STORING DISCS

(Storing without using the six-disc magazine)

- Discs are made of the same kinds of plastic used for conventional analog audio records. Be careful not to allow discs to warp; always store discs in their cases vertically, avoiding locations with heat or humidity, or extremely low temperatures. Avoid leaving discs in cars and on the seats being exposed to direct sunlight. This can be harmful to your discs.
- Always read and abide by the precautionary notes listed on the disc labels.

REMOVING THE TRANSPORT SCREWS

The vibration-protection of the CD player is fixed with four screws for shipping.

① Remove the screws and spacer on the front center and left side.
(Keep the removed screws in the pocket inside the main unit door in case it becomes necessary to move the unit again.)

② Remove those screws on both sides of the front, and install them to the holes indicated by the arrows.

When transporting the CD player, make sure to install the screws for protection.
To protect the mechanisms, make sure to remove all three magazines from the player before transport.

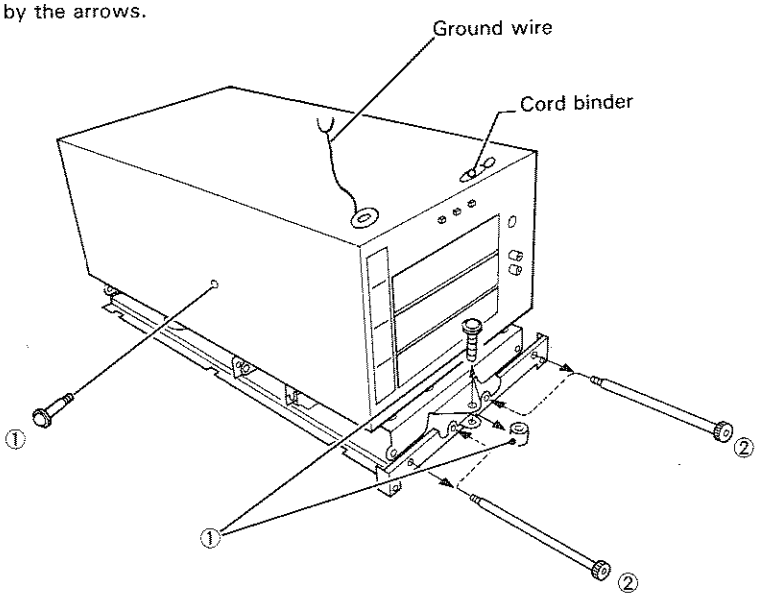

NAME AND FUNCTION OF EACH PART

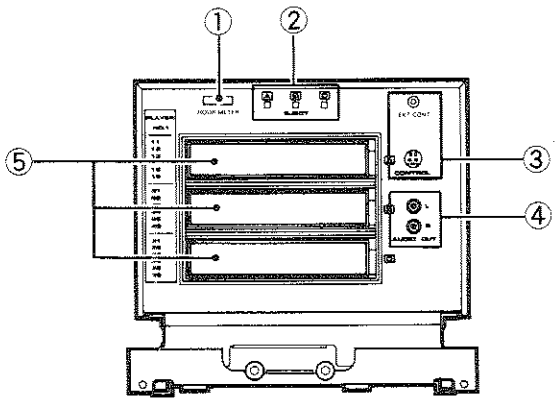

① HOUR METER

Displays the duration of time the unit has been used.

② EJECT keys

Press to eject the magazines.

③ CONTROL jacks

CONTROL:
Connect to the specified CONTROL jacks of CJ-V50 the controller section.
EXT CONT.:
A terminal to externally control the CD player. Usually not used.

④ AUDIO OUT jacks

Connect to the specified AUDIO IN jack of CJ-V50 the amplifier section.

⑤ Magazine insertion slots

Insert the 6-disc magazine.
Make sure to insert all three magazines into the three slots. Otherwise, the CD player will not operate.
Insert an empty magazine if no disc is necessary.

CONNECTION

CONNECTING THE CD PLAYER

① Connect the CD player's CONTROL jack to CJ-V50 controller's CONTROL jack with the supplied control cord.
② Connect the CD player's AUDIO OUT jacks to CJ-V50 amplifier's INPUT jack with the supplied audio cord.
③ Connect the CD player's power cord to the AC OUTLET of CJ-V50 amplifier section.
④ Connect the ground wire to the ground terminal.

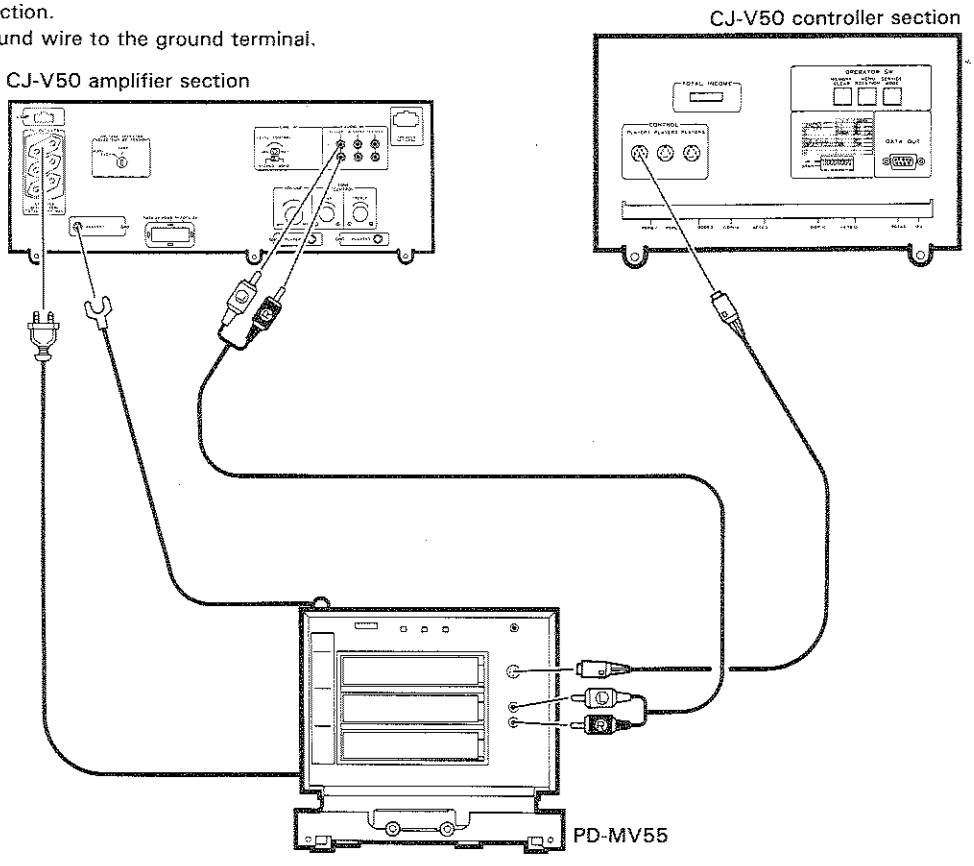

Routing and installation of the power cord to the main unit.

nsert the CD player into the rail of the CD jukebox, and fix it on he rail by securing the two supplied M4 screws.
Route the power cord properly, and plug it in the AC OUTLET of he amplifier.
The figure shows the configuration of the second CD player which is the same as the third CD player.

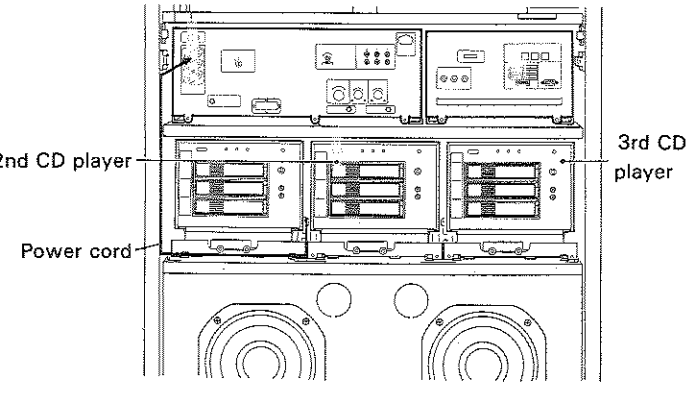

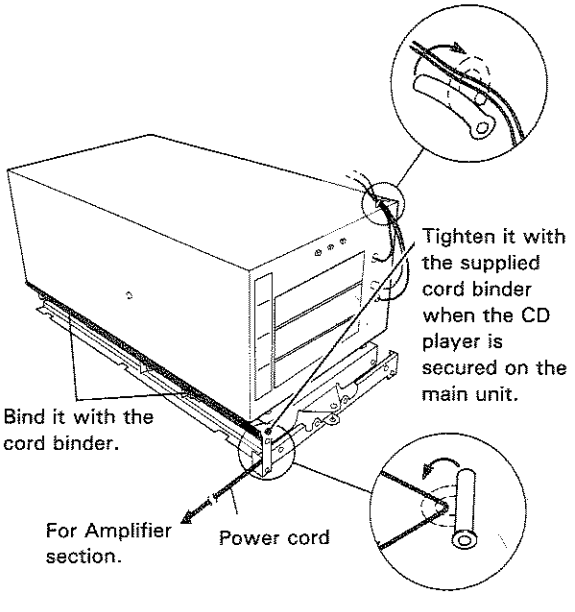
Tighten it with the supplied cord binder when the CD player is secured on the main unit.
Bind it with the cord binder.
For Amplifier section.
Power cord

SPECIFICATIONS

CD player section

Signal-to-Noise ratio	94 dB or more
Dynamic Range	85 dB or more
Wow and Flutter	±0.001 % or less
Frequency Response	4 Hz to 20 kHz ±1.5 dB
Total Harmonic Distortion	0.1 % or less
Output Voltage	1.8 V
Number of channels	2 channels (stereo)
Dimensions	239 (W) x 463 (D) x 215 (H) mm
Weight	9 kg
Power Requirements	AC 220–240 V, 50 Hz
Power Consumption	28 W

Accessory parts

- Magazine 3
- Control cord 1
- Audio cord 1
- Cord binder 1
- Label 1
- Operationg Instructions 1

NOTE:
Specifications and design subject to possible modification without notice, due to improvements.

Published by Pioneer Electronic Corporation.
Copyright © 1990 Pioneer Electronic Corporation.
All rights reserved.